



Room Facilities

Operating Guide for Air Conditioner & Heater Remote Control

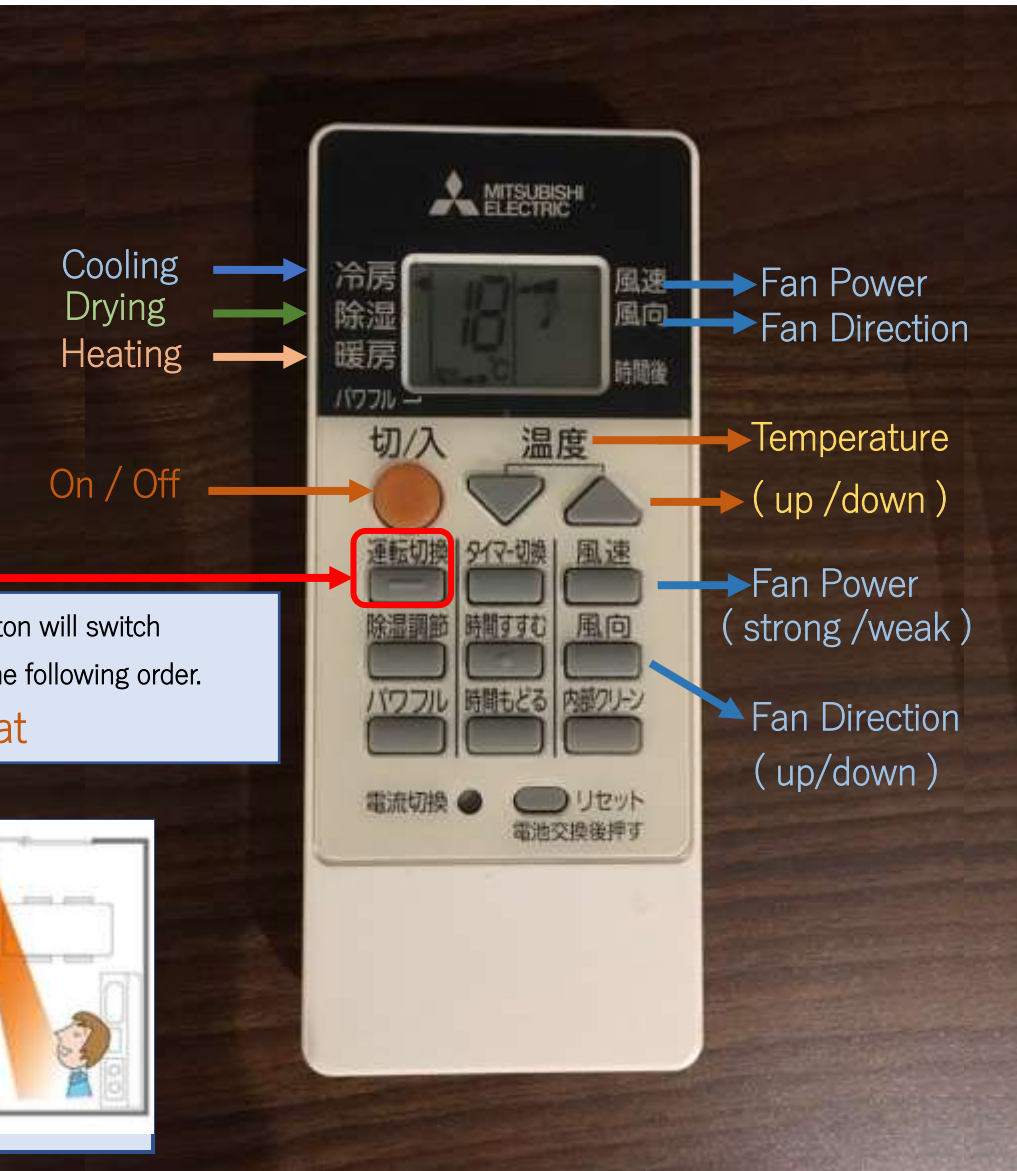

Cooling → 冷房
Drying → 除湿
Heating → 暖房

On / Off → 切/入

Mode → 運転切換

Temperature → 温度 (up/down)

Fan Power → 風速 (strong/weak)

Fan Direction → 風向 (up/down)


Temperature (up/down)

Fan Power (strong/weak)

Fan Direction (up/down)

電流切換 ● リセット
電池交換後押す

Each pushing of the button will switch the operation mode in the following order.
Cool → Dry → Heat

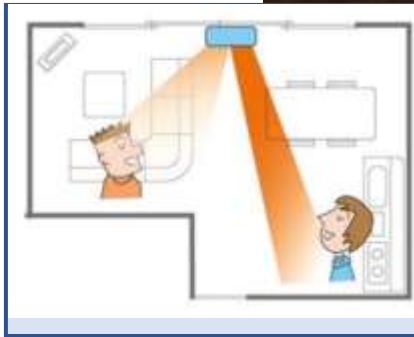

You can adjust the room temperature and humidity level using the remote control.

※ It takes 5~10 minutes to get warm air out.

Wish you have a comfortable and pleasant stay!

Please use the Air purifier (with humidification function)
put the water on your own.

